


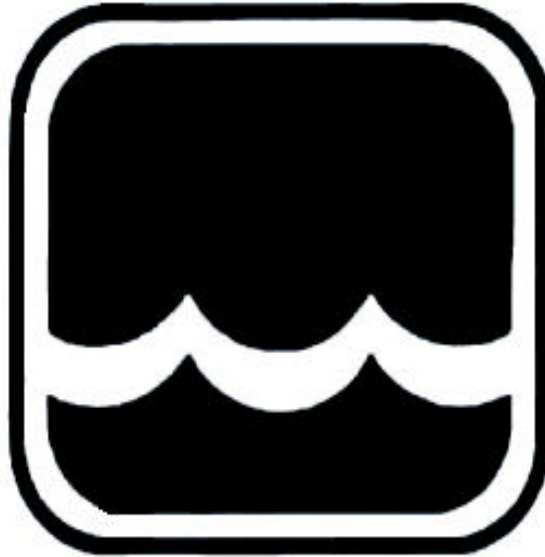

**Global Water**

800-876-1172 · [globalw.com](http://globalw.com)



**Global Water**

**Instrumentation, Inc.**

11390 Amalgam Way

Gold River, CA 95670

T: 800-876-1172

Int'l: (916) 638-3429, F: (916) 638-3270

**Automatic Voice Dialer: AD200-4**



## Global Water

800-876-1172 · globalw.com

### ***Congratulations!***

Thank you for purchasing Global Water Instrumentation, Inc.'s Model AD200-4, the "smartest", most comprehensive automatic voice/pager security dialer available. Representing an exciting new level of achievement, the AD200-4 combines technologically advanced features, ease of programming and reliable operation in a compact, unobtrusive dialer completely compatible with any security alarm system. Installation and hookup are quick and easy, whether installed in conjunction with normally open, normally closed dry contact, or voltage activation sensors. The unit can also function as a stand-alone device, by simple connection to an ordinary telephone jack. The keypad cover glides on and off for added attractiveness and security.

### **Table of Contents:**

<b>I)</b>	<b>AD200-4 Checklist .....</b>	<b>3</b>
<b>II)</b>	<b>Inspection.....</b>	<b>3</b>
<b>III)</b>	<b>How It Works .....</b>	<b>3</b>
<b>IV)</b>	<b>Panel Displays.....</b>	<b>5</b>
<b>V)</b>	<b>Installation Hookups .....</b>	<b>6</b>
<b>VI)</b>	<b>Programming the Dialer.....</b>	<b>8</b>
<b>VII)</b>	<b>Testing Your System.....</b>	<b>17</b>
<b>VIII)</b>	<b>Operating Your System.....</b>	<b>18</b>
<b>IX)</b>	<b>Sample Program Planner.....</b>	<b>20</b>
<b>X)</b>	<b>Specifications .....</b>	<b>24</b>
<b>XI)</b>	<b>Dialer Accessories .....</b>	<b>24</b>
<b>XII)</b>	<b>Important Information/Maintenance.....</b>	<b>25</b>
<b>XIII)</b>	<b>Warranty.....</b>	<b>27</b>

\* Copyright © Global Water Instrumentation, Inc. 2006



## Global Water

800-876-1172 · globalw.com

### I) AD200-4 Checklist

- a) One (1) ea. MODEL AD200-4
- b) One (1) ea. PHONE CABLE
- c) One (1) ea. INSTRUCTION MANUAL
- d) Four (4) ea. 1K RESISTORS

### II) Inspection

- a) Your AD200-4 unit was carefully inspected and certified by our Quality Assurance Team before shipping. If any damage has occurred during shipping, please notify Global Water Instrumentation, Inc. and file a claim with the carrier involved.

Use the checklist to ensure that you have received everything needed to operate the AD200-4.

### III) How It Works

- a) The AD200-4 dialer features busy-line and no-answer detection to ensure prompt transmission of up to 4 pre-recorded messages delivered sequentially to as many as 8 standard telephones, cellular phones, voice and/or numeric pagers. Messages to both local and long-distance calls can be transmitted. When activated, the dialer instantly begins calling the numbers in sequence, delivering each message 1 to 3 times in a row, in accordance with the pre-selected number of dialing attempts.

The AD200-4 is extensively programmable, offering personalized customization to fulfill virtually any residential or business requirement. Plain-English prompts walk the user through the process in a timely manner.

Programming options abound, allowing the user to:

- Store up to eight (8) telephone/pager numbers.
- Choose 1- 9 calling efforts for the numbers dialed.
- Select 1-3 message repeats.
- Record a variable combination (maximum: 7) of instructional outgoing messages (total elapsed time: 51 seconds).

Program up to four (4) separate input channels with individually enable/disable, entry/exit delay and activation options (Normally Open (N.O.), Normally Closed (N.C.) (dry contact or voltage activation) including momentary and continuous activation for each).

Further individualize each channel by selecting the delay times, telephone/pager numbers to be dialed, and the specific outgoing messages to be played.



## Global Water

800-876-1172 · [globalw.com](http://globalw.com)

Please Familiarize Yourself With These Instructions Before Installation/Operation. This guide describes how to program and operate the dialer. We strongly recommend that you read the entire manual before attempting to use the unit.

To enhance ease of programming and operation, this guide includes:

- A Programming Sample/Quick Setup review (Page 20) with a corresponding Program Planner.
- A Blank Program Planner (Page 23). One copy of this Planner should be kept in a safe place by the end user. The installer should also retain a separate copy.





We are happy to provide a full measure of security reassurance and peace of mind with the Model AD200-4. For information about other innovative Global Water equipment, call (800) 876-1172.



**Global Water**

800-876-1172 · globalw.com

### IV) Panel Displays

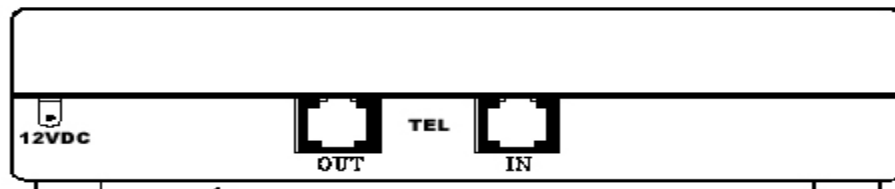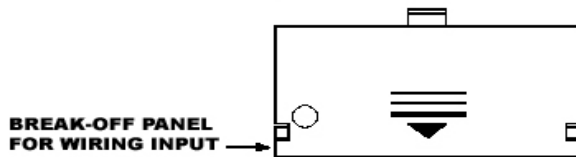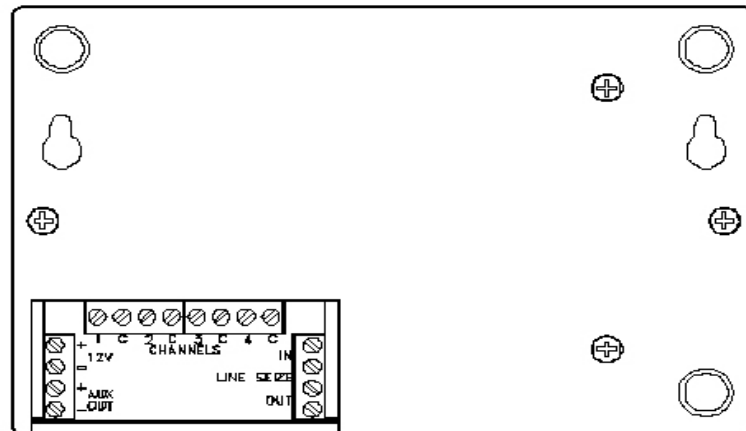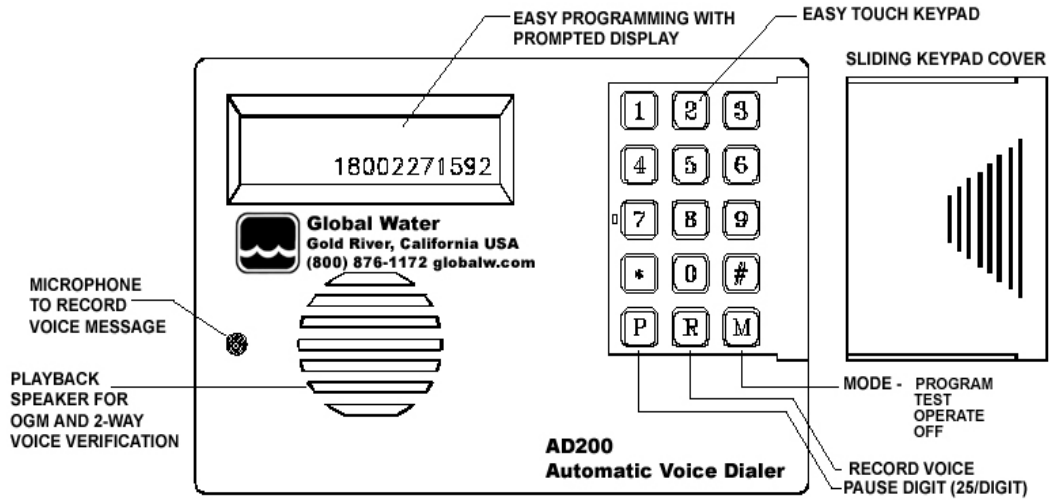


↑ **TERMINAL ACCESS ON BACK**




# Global Water

800-876-1172 · globalw.com

## V) Installation Hookups

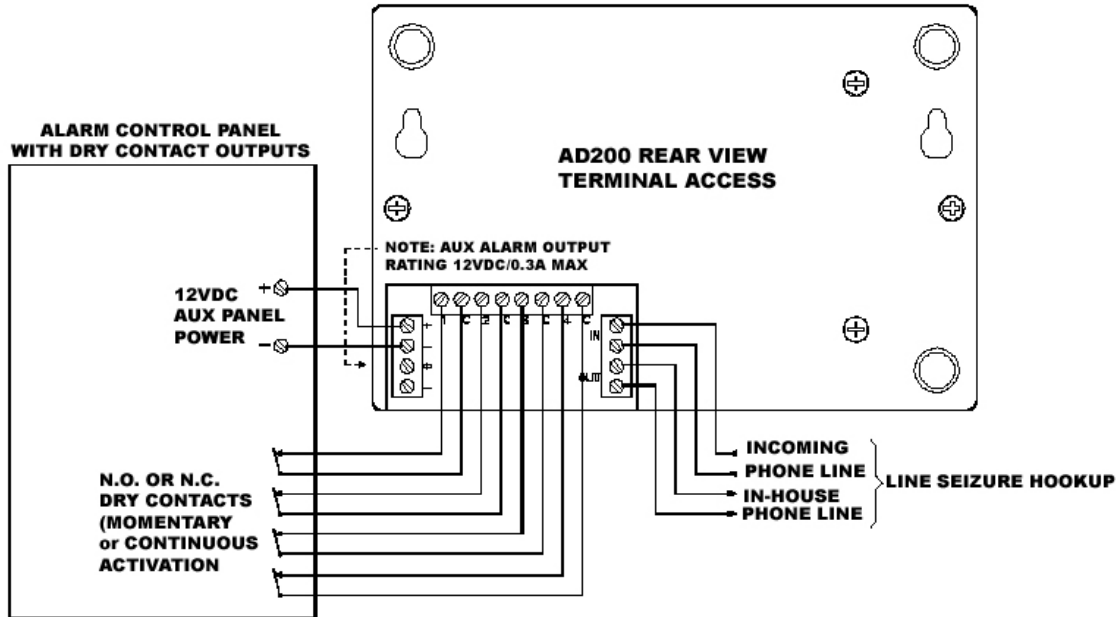

### DRY CONTACT ALARM PANEL INTERFACE

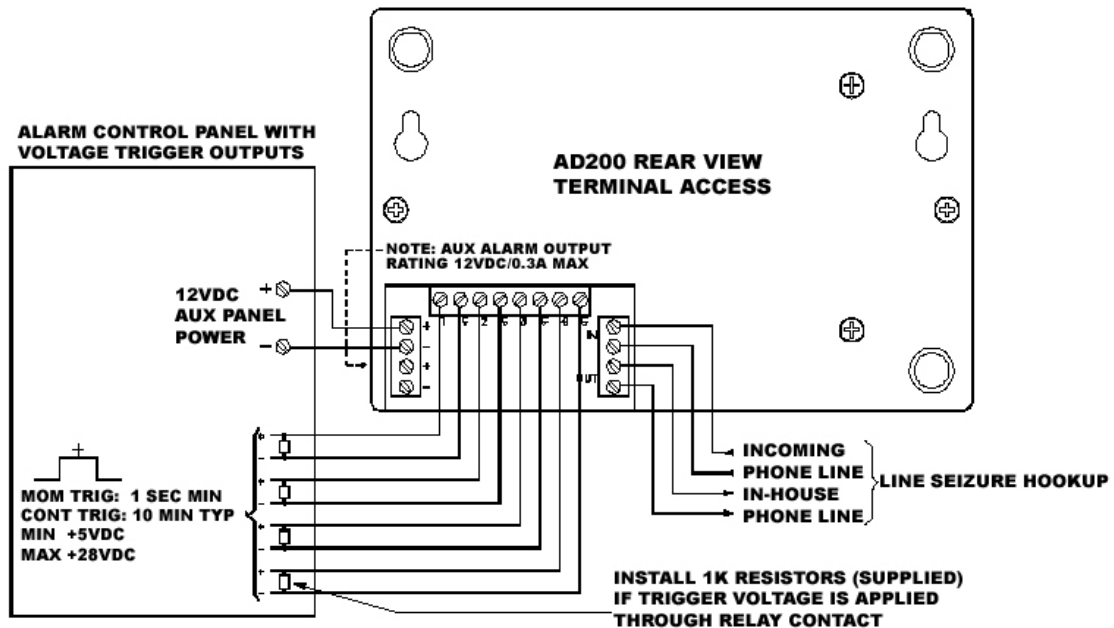


### VOLTAGE TRIGGER ALARM PANEL INTERFACE




# Global Water

800-876-1172 · globalw.com

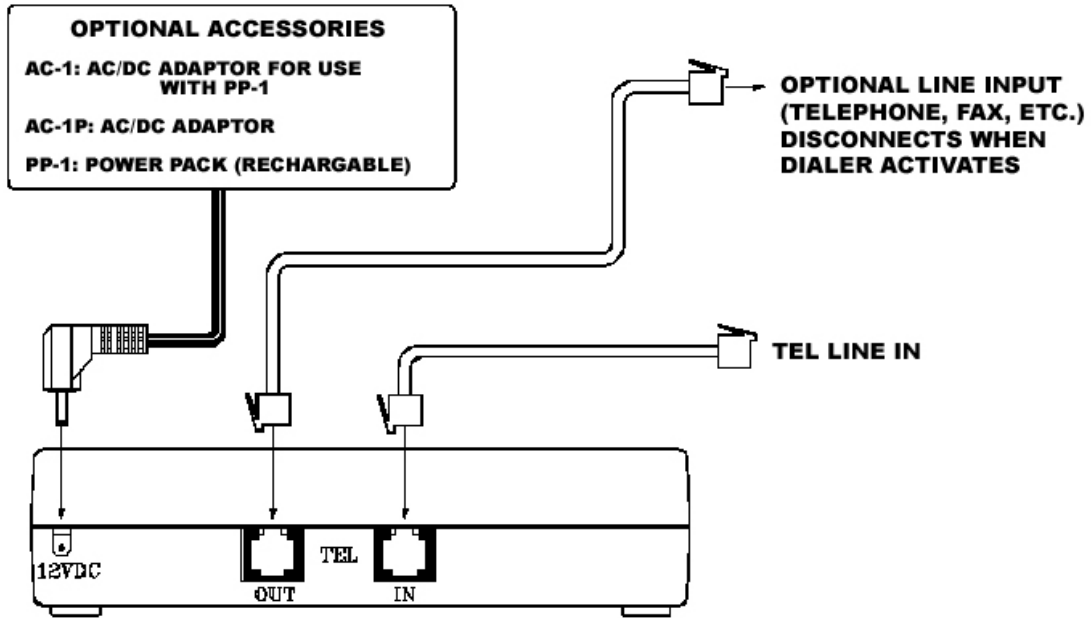

## POWER & TELEPHONE LINE INTERFACE

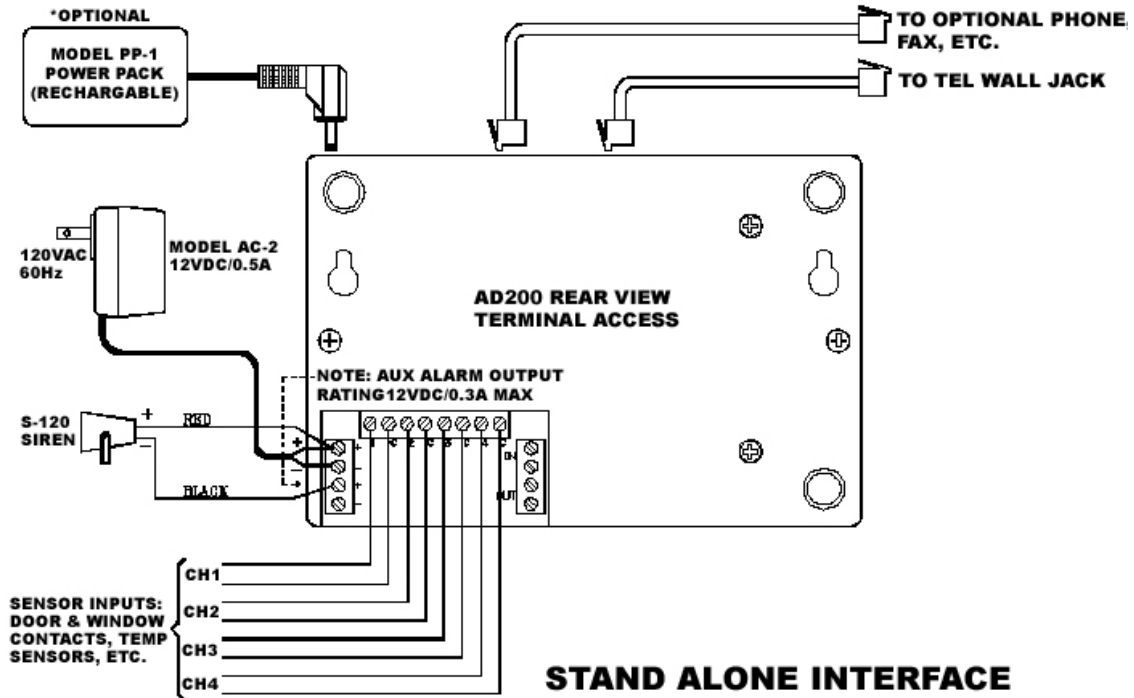



# Global Water


800-876-1172 · globalw.com

## VI) Programming the Dialer

### a) Overview

Please study this section thoroughly before beginning to program the dialer, referring to the Sample Program Planner on page 20. Then, select from among the options for each feature, listing each choice in pencil on the blank Program Planner on page 23. Once the dialer is correctly programmed, list each choice in ink. One copy of the Planner should be kept by the installer; one copy should remain with the end user.

### A look at the keypad:

	<p><b>CALLOUT FOR NUMERALS:</b> Press these keys to enter telephone numbers and other programming information as specified in this manual. A maximum of 50 digits can be input in each phone/pager location.</p> <p><b>CALLOUT FOR P:</b> Press this key to program in a pause. Each “P” provides a 2-second pause.</p> <p><b>CALLOUT FOR R:</b> Press this key to record the combination of identification and directional outgoing messages (OGMs). The total elapsed OGM time cannot exceed 51 seconds.</p> <p><b>CALLOUT FOR M:</b> Press this key to change the Mode of the dialer, in sequence: PROGRAM TEST OPERATE OFF.</p>
--	---

Once the unit has been programmed, removing power or placing the dialer in the OFF mode will not affect the programming.







# Global Water

800-876-1172 · globalw.com

## b) Programming Telephone and/or Pager Numbers

### *First Time Installation to Initialize Dialer Follow Steps 1 & 2.*

1. Apply power to the unit.
  - The LCD will read: **NOT PROGRAMMED**  
**PRESS KEYPAD #1**
2. Press 1.
  - The LCD will change to read: **USP AD200-4 X.X**
  - *Then:* **PROGRAM: NUMBERS**
  - *Then:* **SELECT: 1-8**
  - 0(DONE)
3. You are now ready to begin programming the dialer. All programming can be input before connecting the dialer to a telephone line. Check the unit's LCD as you program numbers in the dialer to ensure accuracy. Please complete all programming instructions before attempting to operate the unit.

Before programming your dialer to call the police, fire department, or 9-1-1 directly, you must check with these agencies for their approval.

A maximum of 50 digits (including pauses) can be programmed in at each location.

**\*PROGRAM: NUMBERS      SELECT: 1-8**  
**1(YES) 2(NO)          0(DONE)**

\*This prompt will appear after a number has been programmed and this section has been exited.

1. **Step 1** - Press location number 1-8 to program the first number. This can be any location 1-8. You do not have to program locations in sequence. For example, you can program numbers in locations 3 and 5. **When you are done programming all the desired telephone and/or pager numbers, press "O" to exit this section.**  
The LCD will read: **PAGER**  
**1(YES) 2(NO)**
2. **Step 2** - Press "1" if you wish to program in a numeric pager number (step 3A). Press "2" if you wish to program in a telephone number (step 3B), cellular phone number (step 3B), or a voice pager (step 3C).
3. **STEP 3A - NUMERIC PAGERS NOTE: WHEN PROGRAMMING NUMERIC PAGERS, YOU MUST PROGRAM IN ONE OR MORE PAUSES. EACH "P" PROVIDES A 2- SECOND PAUSE. BEFORE PROGRAMMING IN A PAGER, CALL THE NUMBER TO DETERMINE THE NUMBER OF 2-SECOND PAUSES TO BE**



# Global Water

800-876-1172 · globalw.com

## PROGRAMMED IN.

If you pressed “1” to program in a numeric page :

(a) Press the digits of the pager to be called. The numbers will appear on the LCD, as will the following key designations.

(b) Press “P” one or more times in accordance with the number of seconds needed to accommodate the pager.

**(Remember, each “P” provides a 2-second pause).**

(c) Press the digits of the numeric pager code.

**NOTE: SOME PAGER SERVICES REQUIRE A “#” SIGN FOR SEPARATION OF THE NUMERIC CODE OR AT THE END OF THE NUMERIC CODE FOR PROPER TRANSMISSION.**

(d) Press “\*” to store the sequence.

*Example: To store numeric pager number 555-1212, a 4-second Pause and code 3456:*

(e) Press:



## 4. STEP 3B – TELEPHONE NUMBERS

 
If you pressed “2” and wish to program in a telephone number:

(a) Press the digits of the number to be dialed. For long-distance numbers, first press “1” followed by the area code and then the number. The number will appear on the LCD.

(b) Press “\*” to store the sequence.

*Example: Store telephone number 1-800-555-1212:*

(c) Press:



**REMEMBER/NOTE: Before programming your dialer to call the police, fire department or 9-1-1 directly, you must check with these agencies for their approval.**

## 5. STEP 3C – VOICE PAGERS

If you pressed “2” and wish to program in a voice pager:

(a) Press the digits of the pager to be called.

 
(b) Press “P” one or more times in accordance with the number of seconds needed to accommodate the pager.

**(Remember each “P” provides a 2-second pause).**

(c) Press “\*” to store the sequence. The number will appear on the LCD.

*Example: To store voice pager 555-1212 and a 4-second pause:*

(d) Press:





# Global Water

800-876-1172 · globalw.com

- 6. **STEP 4** - Repeat steps 1-3 for each number to be programmed in each location. Select any of eight (8) location numbers in Step 1 (SELECT: 1-8) for each number to be programmed.
- 7. **STEP 5** - When you are done programming all desired telephone and/or pager numbers, press “0” to exit this section.

**NOTE: IF YOU ENTER THE WRONG CHOICE, PRESS “M” KEY REPEATEDLY AND RETURN TO THE “PROGRAM MODE”, THEN SELECT THE SECTION TO CHANGE (“1” ACCEPT SECTION, “2”**

b) **Programming Auxiliary Information**

The dialer is preset at the factory to typical telephone line (TLINE), PBX, Dialing attempts and Message Repeat options. If you choose to accept the following default prompts, simply press “2” to scroll to the next section. **If your phone system requires dialing a digit to get an outside line or dial tone, similar to PBX, then turn PBX on and enter digit to program.**

**PRESETS**

T-LINE.....TONE  
 PBX.....OFF  
 ATTEMPTS.....2  
 MESSAGE.....2

To change the presets, follow these steps.

1. **T-LINE**

- (a) The LCD will display: **PROGRAM: T-LINE**  
**1(YES) 2(NO)**
- (b) Press “1” to program T-LINE.
- (c) Press “2” to scroll to the next section.
- (d) The LCD will display: **PROGRAM: T-LINE**  
**1(TONE) 2(PULSE)**
- (e) Press “1” for TONE. Press “2” for PULSE.

2. **PBX**

- (a) The LCD will display: **PROGRAM: PBX**  
**1(ON) 2(OFF)**
- (b) **Step 1:** Press “1” for ON. Press “2” for OFF.
- (c) **Step 2:** If “1” is entered, the LCD will display:  
**PROGRAM: PBX**  
**ENTER PBX NUMBER**
- (d) Enter PBX number (1 digit).



## Global Water

800-876-1172 · globalw.com

### 3. **ATTEMPTS**

ATTEMPTS refers to the number of times the dialer will call each designated number. Both successful and unsuccessful (busy or no answer) call are considered attempts.

(a) The LCD will display: **PROGRAM: ATTEMPTS**  
**ENTER 1-9**

(b) **Step 1:** Press the digit (1-9) corresponding to the number of times you wish the dialer to call each number.

### 4. **MESSAGE**

MESSAGE refers to the number of times each message will be delivered to each designated number.

(a) The LCD will display: **PROGRAM: MESSAGE**  
**REPEAT ENTER 1-3**

(b) **Step 1:** Press the digits (1-3) corresponding to the number of times you wish the message(s) to be delivered.

(c) After selecting the number of message repeats, the dialer will automatically exit this section.

### c) **Structuring Your Outgoing Messages**

The AD200-4 dialer was designed with optimum versatility and functionality in mind. Nowhere is this more apparent than in the matrix of outgoing messages (OGMs). The user's ability to "mix and match" OGMs allows complete system customization and provides ultimate efficiency.

Total OGM time is 51 seconds.

A beginning identification (ID) message of up to 15 seconds can be programmed in (options #4, #6, and #8). Your ID message should clearly state your name, address and other pertinent emergency information.

Typically, each OGM will have a specific purpose. For instance, OGM 1 can alert the person notified to contact the fire department while OGM 2 can alert the person to contact the police department. Typically, the dialer is programmed to notify family, friends, or another responsible party. Before programming your dialer to call the police, fire department, or 9-1-1 directly, you must check with these agencies for their approval.

1. **OPTION #1** - No OGM. Select this option if you do not wish to record any outgoing messages.
2. **OPTION #2** - 1 OGM. Select this option if you wish to record one OGM, which may be as long as 51 seconds.
3. **OPTION #3** - 2 OGMs. Select this option if you wish to record two OGMs, each of which may be as long as 25.5 seconds.



## Global Water

800-876-1172 · globalw.com

4. **OPTION #4** - ID plus 2 OGMs. Select this option if you wish to record one ID of up to 15 seconds in length, and two OGMs, each of which may be as long as 18 seconds.\*
5. **OPTION #5** - 3 OGMs. Select this option if you wish to record three OGMs, each of which may be as long as 17 seconds.
6. **OPTION #6** - ID plus 3 OGMs. Select this option if you wish to record one ID of up to 15 seconds in length, and three OGMs, each of which may be as long as 12 seconds.\*
7. **OPTION #7** - 4 OGMs. Select this option if you wish to record four OGMs, each of which may be as long as 12.75 seconds.
8. **OPTION #8** - ID plus 4 OGMs. Select this option if you wish to record one ID of up to 15 seconds in length, and four OGMs, each of which may be as long as 9 seconds.\*

\*If your ID message is less than 15 seconds in length, the remaining time will be evenly divided among the OGMs.

*Example:* OPTION #4: ID plus 2 OGMs. If the ID is 10 seconds, then each OGM can be (51 minus 10 equals 41 divided by 2 equals) 20.5 seconds in length.

### d) **Programming and Recording Your Outgoing Messages**

Follow these steps to program and record your outgoing messages. Skip this portion if you have programmed in only numeric pagers, which rely on coded DTMF messages. As with all AD200-4 programming, the unit need not be connected to a phone line when information is programmed in. Remember that “OPT” on the LCD stands for option; “OGM” stands for outgoing message.

1. **STEP 1** Decide which of the eight options you prefer.
2. **STEP 2** Before programming in this option, write down all your messages. Time them carefully, changing them if necessary to fit the allotted time frame. Practice saying them, clearly enunciating each message for maximum clarity in case of an emergency. Keep a final recording script.
3. **STEP 3** Program your option.
  - (a) The LCD will read: **PROGRAM: OGMS**  
**1(YES) 2(NO)**
  - (b) Press “1” to program your OGMs. Press “2” to scroll to the next section.
  - (c) Press “1” to select the option (#1- #8) displayed or press “2” to scroll to the desired option.
4. **STEP 4** After selecting your option as explained above, record your message.



## Global Water

800-876-1172 · globalw.com

- (a) The word **RECORD** will appear in the upper left corner of the LCD, above the instruction: **PRESS R**. The option selected will appear in the upper right corner. For instance, if you selected option #2, the LCD will read:

**RECORD OGM1**  
**PRESS R**

- (b) Speak 6-12 inches away from the microphone. Referring to your script and speaking in a normal voice, press and hold **R** (the word **RECORDING** will be displayed), releasing the key after you have completed enunciating your messages. The word **DONE** will appear on the LCD when the maximum allotted time has been reached.

- (c) The LCD will read: **PLAY OGM(S)**  
**1(YES) 2(NO)**

Press “1” to play back your recording

- (d) The LCD will read: **ACCEPT**

**1(YES) 2(NO)**

Press “1” to accept the recorded OGM(s). Press “2” if you wish to re-record the messages, beginning with Step 4.

e) **Changing The OGMs**

After your system is up and operating, you may change one or more of the recorded OGMs and/or choose a completely different option. To do so, simply scroll to the programming section on your display:

**PROGRAM: OGMS**

**1(YES) 2(NO)**

Select the option, then begin again from Step 3 above to record your new message(s).

f) **Programming The Channels**

The AD200-4 is designed to be adaptable to a complete range of personalized applications. Each of the four input channels can be programmed individually for full system customization. In addition to setting enable/disable options, entry/exit delays and type of activation (N.O., N.C., & momentary or continuous), each user can specify which emergency messages will be delivered and which numbers will be dialed. The first channel activated will be the priority channel. Numbers programmed to that channel will be completed before the dialer moves on to the next channel(s). Although comprehensive in scope, the system is easy to program. Just follow these simple steps.

1. **STEP 1**

- (a) The LCD will read: **PROGRAM: CHANNELS**  
**1(YES) 2(NO)**

- (b) Press “1” to begin programming the channels.



## Global Water

800-876-1172 · globalw.com

### 2. STEP 2

- (a) The LCD will read: **SELECT: 1-4**  
**0(DONE)**
- (b) Enter the channel you wish to program (1-4).

### g) Enable/Disable

#### 1. STEP 3

- (a) The LCD will read: **CH X: ENABLE**  
**1(YES) 2(NO)**  
("CH X" being the channel selected)
- (b) Press "1" to enable the channel. Press "2" to disable the channel.

### h) Exit/Entry Delays

Capable of programming up to a maximum of 3 minutes and 20 seconds each.

#### 1. STEP 4

- (a) The LCD will read: **CH X: EXIT DELAY**  
**1(YES) 2(NO)**
- (b) Proceed with (i) if you wish to program an exit delay.
- (c) Proceed with (ii) if you do not.
  - (i) To program exit delay, press "1".
  - (ii) The LCD will read: **ENTER 0-199 THEN**  
**PRESS \***  
Enter the digits corresponding to the number of seconds you wish to install. (For example, press "120" then press "\*", if you wish to install a 120-second exit delay).
- (d) If you do not wish to program an exit delay, press "2".

#### 2. STEP 5

- (a) The LCD will read: **CH X: ENTRY DELAY**  
**1(YES) 2(NO)**
- (b) Proceed with (i) if you wish to program an entry delay.
- (c) Proceed with (ii) if you do not.
  - (i) To program an entry delay, press "1".
  - (ii) The LCD will read: **ENTER 0-199 THEN**  
**PRESS \***  
(iii) Press "1" to program a delay. Then enter the digits corresponding to the number of seconds you wish to install. (For example, press "90" then press "\*", if you wish to install a 90-second delay).
- (d) If you do not wish to program an entry delay, press "2".

### i) Normally Open/Normally Closed

- 1. **STEP 6** The LCD will read: **CH X: N.O./N.C.**  
**1(N.O.) 2(N.C.)**



## Global Water

800-876-1172 · globalw.com

- (a) Press “1” to select a normally open channel.
- (b) Press “2” to select a normally closed channel.

### j) **Momentary/Continuous Activation**

1. **STEP 7** The LCD will read: **CH X: MOM/CONT**  
**1(MOM) 2(CONT)**

- (a) Press “1” to select a momentary trigger.
- (b) Press “2” to select continuous activation.

### k) **Numbers Dialed/Outgoing Messages**

Following these steps allows you to choose which OGM(s) will be delivered and which numbers will be dialed for each channel.

NOTE: Dialer LCD will only show programmed numbers and OGM options.

1. **STEP 8** The LCD will read: **CH X: DIAL #X**  
**1(YES) 2(NO)**

“Dial #X” being the number in phone/pager location 1-8)

- (a) Press “1” to dial phone/pager #X to be dialed when the selected channel is activated. Press “2” if you do not wish this number to be dialed.
- (b) Continue the above procedure for each of the up to eight phone/pager numbers programmed in.

2. **STEP 9** The LCD will read: **CH X: OGM X**  
**1(YES) 2(NO)**

(“OGM X” being the OGM recorded in OGM options #2 - #8)

- (a) Press “1” to deliver OGM X when the channel is activated. Press “2” if you do not wish this OGM to be delivered.
- (b) Continue the above procedure for each Channel/OGM. If you have programmed in and recorded an ID message as one of your OGM options, this ID will be delivered to all channels. It will not appear in the Channel display.

**NOTE: ID AND OGM(S) WILL ONLY BE DELIVERED TO TELEPHONE NUMBERS, CELLULAR NUMBERS, AND VOICE PAGERS.**

### l) **Completing The Programming**

Once you have programmed in all dialing and OGM options for each channel, the LCD will read: **ACCEPT**

**1(YES) 2(NO)**

1. **STEP 10** Press “1” to accept the Channel programming. Press “2” to re-program or to revert to previously programmed setting. You are now ready to review your programming and test the system.  
**PRESS “M” TO EXIT PROGRAMMING MODE.**





## Global Water

800-876-1172 · globalw.com

### VII) Testing Your System

#### *Test your system before an emergency occurs.*

Do not neglect to review programmed information and verify all elements of your system thoroughly before relying on the dialer to deliver the necessary information to the desired parties accurately and completely. We strongly recommend testing the system in test mode before connecting to a telephone line. The test mode tests the stored information, not the full functionality of the dialer. To test the full functionality of the dialer, the unit must be tested in the operate mode. In the test mode, the dialer will not make more than one attempt per number dialed or play any OGM more than once.

**NOTE: IF YOU ENTER THE WRONG CHOICE, PRESS “M” KEY REPEATEDLY AND RETURN TO THE “PROGRAM MODE”, THEN SELECT THE SECTION TO CHANGE (“1” ACCEPT SECTION, “2” FOR NEXT SECTION), THEN ENTER CORRECT INFORMATION.**

- a) **STEP 1** Press the “M” Mode key until the LCD reads: **TEST: T-LINE  
1(YES) 2(NO)**
- b) **STEP 2** Press “1” to display the T-Line configuration. The data will scroll through all selections. Press “2” to scroll to the next section.
- c) **STEP 3** The LCD will read: **TEST: CHANNEL(S)  
1(YES) 2(NO)**  
Press “1” to test channels.  
Press “2” to scroll to the next section.
- d) **STEP 4** The LCD will read: **SELECT: 1-4  
5(ALL) 0(DONE)**  
Select the channel you wish to test (1-4). Press “5” to test “all” Channels. Once a channel is selected (or “all”) the programmed channel information will be displayed on the LCD. Verify data accuracy as the LCD scrolls through by comparing the information displayed with that specified on your Program Planner. Listen to your recorded message(s) to ensure that the correct OGM (if programmed) is delivered. Press “0” to exit testing.
- e) **STEP 5** Now connect your dialer to the telephone line you will be using and test the system again, to determine if it functions correctly in an actual emergency situation. **Make sure you notify the receiving party of your intent to call them, and tell them it is just a test.**
- f) **STEP 6** To test the operation of your entire system, set Mode to OPERATE and proceed as explained in the next section: Operating Your System.



## Global Water

800-876-1172 · globalw.com

**Test your system on a regular basis, at least once a week.**

### VIII) Operating Your System

You are now ready to begin operating your system, relying on the AD200-4 to work in conjunction with your alarm system to provide 24-hour security reassurance and peace of mind.

When in the operating mode, the system will monitor all the enabled channels, initiating dialing when a valid alarm condition occurs. Upon activation the dialer will begin calling each phone/pager number selected, in sequence, for the pre-selected number of attempts. During each successful attempt, the voice message will be delivered 1, 2, or 3 times, in accordance with the option selected (**numeric messages will only be delivered one time**). In unsuccessful attempts, the dialer will move on to the next phone/pager number after receiving 8 busy or 8 rings without an answer. The dialer will not allow voice messages to be delivered to programmed numeric pager locations.

If you send a message to a phone attached to an answering machine, it will consider this a successful attempt. Make sure you designate the maximum number of message repeats to be sure that a complete message will be left on the answering machine, because part or all of your emergency message may be “lost” while the answering machine delivers its greeting message.

Placing your system in OPERATE can also be used as a final test of the full functionality of each channel’s exit/entry delay, activation, momentary/continuous trigger, phone numbers and OGM. Although serving as a test, this mode reflects actual operation; therefore the OGM(s) will not be heard through your dialer’s speaker but only by each party called.

To begin operating your system, simply press the “M” Mode key until the word OPERATE appears on the LCD. To disarm the dialer, switch the mode to OFF by pressing the same key. All programming information will be retained

#### a) **System Notations**

Here are a few explanations to help you better understand how your AD200-4 dialer operates. For specific information on the AD200-4 unit alone, call Global Water Instrumentation, Inc.’s Customer Service Department during normal business hours at (800) 876-1172.

#### b) **Channel Activation**

Each of the dialer’s four channels can be activated by any of the following: a normally open dry contact, normally closed dry contact or positive 5-28VDC voltage activation.



## Global Water

800-876-1172 · globalw.com

Under a momentary activation, a single violation of a channel will cause the dialer to initiate delivering all preselected OGMs to all programmed numbers associated with that channel. Under continuous activation, the dialer will initiate the process, terminating it if/when the activated channel is restored to a non-alarm state. Once an alarm has occurred and all attempts satisfied, the dialer will continue to monitor any remaining enabled channel(s). Once the activated channel has been restored to a non-alarm state, it will then be re-armed and ready for the next alarm.

c) **Exit/Entry Delays**

If a channel is activated during a pre-selected exit delay, the alarm condition will be ignored until the delay has expired. If an alarm occurs, the entry delay will cause the dialer to wait before starting the dialing process. **To de -activate the dialer during the entry wait period, simply press “M” to return to the OFF Mode.** Both exit and entry delay times can be pre-selected to range from 1-199 seconds.

d) **Additional features**

The dialer offers three innovative features that enhance the utility of the entire system.

e) **Listen-In**

While receiving an OGM on a touch-tone phone, the called party can press “1” to listen in to the activity at the other end of the line for one minute. Pressing “1” again restarts the minute increment period and can be repeated indefinitely. When “1” is pressed the OGM will stop playing and the listen in period will start.

f) **Two-Way** After the called party is listening-in, that party can press “2” to begin a two-way conversation lasting for one minute. This procedure also can be repeated indefinitely by pressing “2” again to restart the minute. Once you are in two-way mode you cannot go back to Listen-In.

g) **Remote Turn-Off** The called party can remotely terminate the activated channel any time during the OGM by pressing “1” then “#” twice within one second. The dialer will continue to monitor the remaining channel(s). Once the terminated channel is restored to a non-alarm state, it will re-arm. If in listen-in or two-way, simply press “#” twice in one second, for remote turn-off.





## Global Water

800-876-1172 · globalw.com

the third phone number in location 6; press “1” to indicate numeric pager; then press, in sequence, “3456789PP5544#” followed by the “\*” sign.

4. **STEP 4** Press “0” to exit PROGRAM NUMBERS.
5. **STEP 5** At the PROGRAM: T-LINE prompt, press “1” to choose tone; press “2” to indicate no PBX; press “2” to program in two dialing attempts per emergency number called; press “2” to program in two message repeats for each call.
6. **STEP 6** Press “1” to PROGRAM OGM(S). Press “2” three times to Scroll to option #4; press “1” to program in an ID message and two specific outgoing messages (OGMs).
7. **STEP 7** Using a prepared script and speaking six-to-eight inches from the dialer’s microphone on the front of the unit, press “R” when you are ready to enunciate your 15-second identification message and your two 18-second messages. Dialer automatically prompts to next OGM. Make OGM1 a message telling the receiving party to call the police department. Make OGM2 a message to call the fire department.
8. **STEP 8** Press “1” to play back all recorded messages; press “1” again to accept. (**NOTE: DIALER LCD WILL ONLY SHOW PROGRAMMED NUMBERS AND OGM OPTIONS**).
9. **STEP 9** Press “1” to PROGRAM CHANNELS.
10. **STEP 10** Press “1” to program Channel 1. Press “1” to ENABLE. Press “1” then enter “30” then press “\*” for a 30-second EXIT delay; press “1” then enter “15” then press “\*” for a 15-second entry delay. Now press “2” for NORMALLY CLOSED and then “1” for MOMENTARY activation. Press “1” to select phone/pager number 1 to be dialed. Press “1” again to select phone/pager number 5 to be dialed. Press “2” to **not** select phone/pager number 6 to be dialed. Press “1” to select OGM1 to be delivered and press “2” to **not** select OGM2 to be delivered. Press “1” to accept the channel configuration.
11. **STEP 11** Press “4” to program Channel 4. Press “1” to ENABLE. Press “2” twice to indicate no EXIT or ENTRY delay. Now press “1” for NORMALLY OPEN and the “2” for CONTINUOUS activation. Press “1” to select phone/pager number 1 to be dialed. Press “2” to **not** select phone/pager 5 to be dialed. Press “1” to select phone/pager number 6 to be dialed. Press “2” to **not** select OGM1 to be delivered and press “1” to select OGM2 to be delivered. Press “1” to accept the channel configuration.



**Global Water**

800-876-1172 · [globalw.com](http://globalw.com)

12. **STEP 12** Press “0” to exit PROGRAM: CHANNELS. Press “M” to exit programming mode.



# Global Water

800-876-1172 · globalw.com

Fill out this Program Planner in pencil initially

AD2000 PROGRAM PLANNER										Date: _____															
<b>PROGRAM: NUMBERS</b>																									
NUMBER	PAGE		TELEPHONE NUMBER (exclude PBX digit, include numeric pager code)	NAME OF PARTY TO BE REACHED																					
	YES	NO																							
1																									
2																									
3																									
4																									
5																									
6																									
7																									
8																									
<b>PROGRAM: T-LINE</b>																									
TONE	PULSE	PBX		ATTEMPTS	MESSAGE REPEAT																				
		ON	OFF	1 THROUGH 9	1 THROUGH 3																				
		NUMBER																							
<b>PROGRAM: OGMs</b>																									
OPTION	STYLE	BRIEFLY DESCRIBE TYPE OF VOICE MESSAGE(S)																							
1	NO OGM																								
2	1 OGM																								
3	2 OGMs																								
4	ID + 2 OGMs																								
5	3 OGMs																								
6	ID + 3 OGMs																								
7	4 OGMs																								
8	ID + 4 OGMs																								
<b>PROGRAM: CHANNELS</b>																									
CH	ENABLE		EXIT DELAY(SEC)		ENTRY DELAY(SEC)		ACTIVATION				DIAL NUMBER								PLAY OGM						
	YES	NO	YES	NO	0-100	YES	NO	0-100	NO	NC	MOM	CONT	1	2	3	4	5	6	7	8	1	2	3	4	
1																									
2																									
3																									
4																									
<b>PROGRAM: NUMBERS</b>																									
NUMBER	PAGE		TELEPHONE NUMBER (exclude PBX digit, include numeric pager code)	NAME OF PARTY TO BE REACHED																					
	YES	NO																							
1																									
2																									
3																									
4																									
5																									
6																									
7																									
8																									
<b>PROGRAM: T-LINE</b>																									
TONE	PULSE	PBX		ATTEMPTS	MESSAGE REPEAT																				
		ON	OFF	1 THROUGH 9	1 THROUGH 3																				
		NUMBER																							
<b>PROGRAM: OGMs</b>																									
OPTION	STYLE	BRIEFLY DESCRIBE TYPE OF VOICE MESSAGE(S)																							
1	NO OGM																								
2	1 OGM																								
3	2 OGMs																								
4	ID + 2 OGMs																								
5	3 OGMs																								
6	ID + 3 OGMs																								
7	4 OGMs																								
8	ID + 4 OGMs																								
<b>PROGRAM: CHANNELS</b>																									
CH	ENABLE		EXIT DELAY(SEC)		ENTRY DELAY(SEC)		ACTIVATION				DIAL NUMBER								PLAY OGM						
	YES	NO	YES	NO	0-100	YES	NO	0-100	NO	NC	MOM	CONT	1	2	3	4	5	6	7	8	1	2	3	4	
1																									
2																									
3																									
4																									

After thoroughly testing your system, redo your Program Planner in ink. One copy should be kept in a safe place by the end user; one copy should be retained by the installer.



# Global Water

800-876-1172 · globalw.com

## X) Specifications

- a) Dimensions
  - Power source: 9-18VDC
  - Current (OPERATE mode – standby): 28mA typical.
  - Current (OPERATE mode – dialing): 100mA max.
  - Activation:
    - 1) N.C. Activation: dialer activates when an “open” is detected
    - 2) N.O. Activation: dialer activates when a “close” is detected
    - 3) Voltage Activation: N.C. (applied voltage: Min. +5VDC, Max. +28VDC)  
N.O. (loss of continuous voltage: Min. 0VDC, Max. 0.25VDC)
  - Max. digits for outgoing numbers: 50
  - Operating temperature range: -18 to 55 C (0 to 130 F)
  - Dimensions (inches): 6 x 4 x 1.5 in
  - Weight (ounces): 10 oz
  - Mounting: Wall or Flat Surface
  - Case Material: ABS
  - Color: White
  - Warranty: 1 Year

**Note:** Design and specifications subject to change without notice.

## XI) Dialer Accessories

- a) **Power Source:**
  - AC-1: AC/DC Adaptor:** Plugs into regular 110VAC outlet to provide the dialer with the required primary power.
  - AC-2: AC/DC Adaptor:** 12VDC/0.5A for stand alone with siren use.
  - PP-1: Power (Rechargeable):** Provides 24 (est.) hours of backup standby power.
  - AC-1P: AC/DC Adaptor For Use With PP-1:** Plugs into regular 110VAC outlet to provide the dialer with the required primary power and additional input for PP-1 interface.
  - IR-1: Isolation Relay:** Converts alarm output voltage to N.C. to provide clean input trigger to dialer.
- b) **Industrial/Residential Sensors F20:**
  - Temperature Supervisory Switch <40 F**
  - HTS: High Temperature Switch**
  - LTS: Low Temperature Switch**
  - CSS: Cold Storage Switch**
  - WLS: Water Level Sensor**
  - RTS: Adjustable Temperature Controller, N.O., N.C.**
  - PLS: Power Loss Sensor (110VAC)**
- c) **Sensors**
  - Magnetic Contacts – Door and Window**
  - Glass Break Detectors**
  - Hold Up Buttons/Emergency Switches**





## Global Water

800-876-1172 · globalw.com

### Pressure Mats – Sealed and Under Carpet Motion Detectors

- d) **Siren S-120:** 2” Mini Siren, 12VDC @ 120 mA typical
- e) **Additional Options Data logger:**
  - AD-2001-DL:** Retains in memory log of alarm events for later retrieval and review.
  - Wireless: AD200-4/W:** Wireless version AD200-4 dialer includes wireless pendant transmitter.
  - 24V Application: AD200-4/F:** For this option the dialer is configured to operate at 24VDC to 32VDC max. All other specifications apply.
  - Wireless and 24V Applications - AD200-4/W/F:** The AD200-4/W/F incorporates both the wireless feature and 24VDC application. See WIRELESS AND 24V APPLICATION for further details.

**NOTE:** CALL GLOBAL WATER FOR ADDITIONAL INFORMATION AND DEVICES NOT LISTED HERE.

**Wireless Upgrade:** The standard AD200-4 can be upgraded for wireless link-up with RF-activated mag contacts, motion sensors, pendant, etc., by installing a new back cover containing a pre-tested RF assembly and swivel antenna. The receiver is connected to the main board via a 4-pin interface connector already included in the standard configuration. See WIRELESS for further details.

**NOTE:** SYSTEMS ALREADY INSTALLED CAN BE UPGRADED WITHOUT REPLACING OR RE-WIRING THE DIALER.

## XII) Important Information/Maintenance

- a) **Location**

Place the dialer on a flat level surface or mount the unit on the wall, away from extreme cold or heat, direct sunlight, excessive humidity and away from equipment that generate strong magnetic fields. Avoid placing near large metal objects and areas that produce smoke, dust and mechanical vibrations.
- b) **Care**

Clean the housing with a soft cloth lightly moistened with water or mild detergent solution. Never use solvents such as alcohol or thinner. Do not allow liquids to spill into the unit.
- c) **Optional Backup**

To ensure continuous operation during power outages, hookup to a 12VDC backup battery pack is recommended. (PP-1) Available from Global Water.



## Global Water

800-876-1172 · [globalw.com](http://globalw.com)

d) **Caution**

Do not use the dialer if a gas leak is suspected or during lightning.

e) **Problems**

If liquid or a foreign object penetrates the unit, disconnect it immediately and contact your installer or other qualified technician.

Before calling Global Water, please make sure.

1. You have read this manual and understand how to operate the dialer.
2. Your phone line is working.
3. You check out the entire system, including external hookup wiring and sensors attached.

**Other issues:**

- f) Call us for tech support: 800-876-1172 or 916-638-3429 (many problems can be solved over the phone). Fax: 916-638-3270 or Email: [globalw@globalw.com](mailto:globalw@globalw.com).

Be prepared to describe the problem you are experiencing including specific details of the application and installation and any additional pertinent information.

In the event that the equipment needs to be returned to the factory for any reason, please call to obtain an RMA# (Return Material authorization). Do not return items without an RMA# displayed on the outside of the package.

Include a written statement describing the problems.

Send the package with shipping prepaid to our factory address. Insure your shipment, as the warranty does not cover damage incurred during transit.

- g) When calling for tech support, please have the following information ready;

1. Model #.
2. Unit serial number.
3. P.O.# the equipment was purchased on.
4. Our sales number or the invoice number.
5. Repair instructions and/or specific problems relating to the product.

h) **Federal Communications Commission Radio And Television Interference Statement For A Class 'B' Device**

This equipment generates and uses radio frequency energy and if not installed and used properly, that is, in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class 'B' computing device in accordance with the specifications in Subpart B of FCC Rules and Regulations (as outlined in the Code of Federal Regulation, Title 47), which are designed to



## **Global Water**

800-876-1172 · globalw.com

provide reasonable protection against such interference in a residential installation.

**i) User Instructions**

If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off, then on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate radio or television.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into a different outlet so that the equipment and receiver are on different branch circuits.
4. Consult the dealer or an experienced radio/TV technician for help.
5. Changes or modifications not expressly approved by Global Water Instrumentation, Inc. could void the user's authority to operate the equipment.

**XIII) Warranty**

- a) Global Water Instrumentation, Inc. warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment from factory. Global Water's obligations under this warranty are limited to, at Global Water's option: (I) replacing or (II) repairing; any products determined to be defective. In no case shall Global Water's liability exceed the products original purchase price. This warranty does not apply to any equipment that has been repaired or altered, except by Global Water Instrumentation, Inc., or which has been subject to misuse, negligence or accident. It is expressly agreed that this warranty will be in lieu of all warranties of fitness and in lieu of the warranty of merchantability.
- b) The warranty begins on the date of your invoice.